

# Caution!

## Plumbing Instructions for Hydraulic Hitches

Connect ports A & B to the hydraulic motor ports on winch. Run hose from auger diverter to the in port on valve. Run a hose from the outside of valve back to fill auger motor. **Note:** In most cases you can winch tanks and fill with dry product at the same time. **Caution:** Free wheel clutch lever on warn winch must never be engaged or disengaged under load.

## Single Spool Open Center Valve (not supplied)

In from auger diverter valve.

